## **Cylinderhead Tightening sequence**

The cylinder head mounting screws must be tightened in the sequence shown in the figure and in stages.

Retighten!

